


Thank you for buying a MRA Windshield.

Read this manual carefully and check the parts list for completeness before you begin. We recommend that you have your screen fitted by an authorised workshop.



1.) Find the fastening points for the VTA:

Since the joints at the fastening points on either side are each slanted at 30°, you will have to find the corresponding position on the screen. To do this, use a cardboard positioning aid that you can make as follows:

- a) Cut a triangle out of a piece of card measuring approximately 35 x 30 cm.

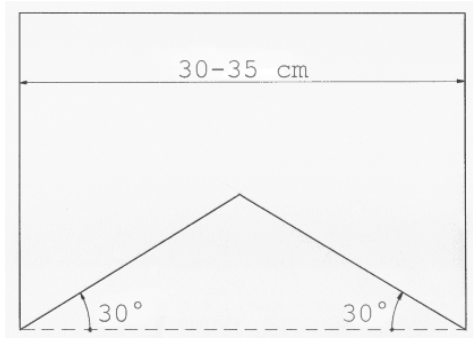

- b) Place the cardboard positioning aid vertically onto the screen where the extension is to be mounted.

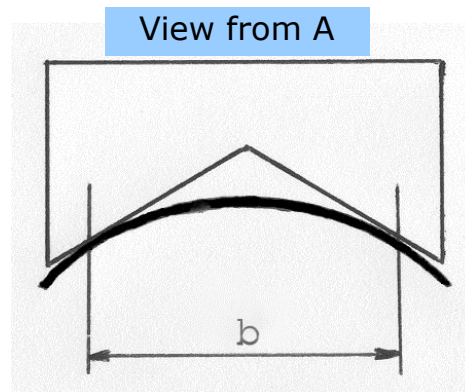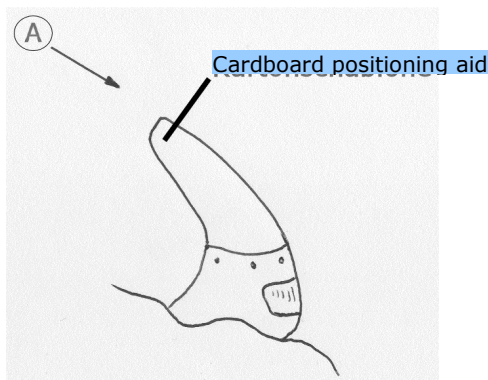

- c) Mark the points on the positioning aid that touch the screen and measure the distance between these two points, "b".

This distance is the gap between the fastening points on the VTA, and is needed to select the right extension. If a corresponding model is available in the range, the fastening holes will have to be drilled into the screen.

2.) Marking the drill holes for the VTA.

- The VTA is placed from above onto the central rear edge of the screen (if there is an edge protector strip on the screen, remove it first). The surface of the joints should touch the screen surface and the stud should rest on the rear edge of the screen.
- Mark the points of contact.
- Draw parallel lines of about 6 cm downwards. Cover the area up with adhesive tape first to prevent damage to the screen.
- Drill two 6.2 mm holes on either side of the lines at 15 and 55 mm from the rear edge.

23 cm	VTA 1	Clear	4025066101504	28 cm
23 cm	VTA 1	Smokegrey	4025066088102	28 cm
25 cm	VTA 2	Clear	4025066096145	33 cm
25 cm	VTA 2	Smokegrey	4025066088119	33 cm
26 cm	VTA 3	Clear	4025066097098	34 cm
26 cm	VTA 3	Smokegrey	4025066088096	34 cm
22 cm	VTA 4	Clear	4025066096152	30 cm
22 cm	VTA 4	Smokegrey	4025066088201	30 cm
24 cm	VTA 5	Clear	4025066096732	33 cm
24 cm	VTA 5	Smokegrey	4025066088126	33 cm
26 cm	VTA 6	Clear	4025066096886	34 cm
26 cm	VTA 6	Smokegrey	4025066089772	34 cm
21 cm	VTA 9	Clear	4025066097340	30 cm
21 cm	VTA 9	Smokegrey	4025066097357	30 cm
25 cm	VTA 11	Clear	4025066116508	31 cm
25 cm	VTA 11	Smokegrey	4025066116515	31 cm
20 cm	VTA 10	Clear	4025066101559	31 cm
20 cm	VTA 10	Smokegrey	4025066101696	31 cm
29 cm	VTA 12	Clear	4025066120222	38 cm
29 cm	VTA 12	Smokegrey	4025066120239	38 cm

After installation, check that all of the screws are tight; tighten them up if necessary. Repeat this at regular intervals. Clean the screen with water, neutral soap and a sponge. Do not use solvents, alcohol or spirits to clean the screen as they will damage it.